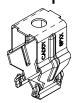
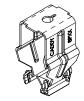
"P" Series Conduit Clips








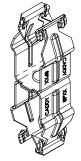



Fig. 1


Fig. 3


Fig. 4

	0								_		
Part Number	Article Number	Fig.	ØA (in. [mm])	\emptyset B (in. [mm])	Conduit Size	C (in. [mm])	Mounting Hole (in. [mm])	F1 (lbs)	F1 (N)	F2 (lbs)	F2 (N)
8P	171130	1	0.71-0.87 [18-22]		1/2"	N/A	9/32" [7]	25	111	15	67
12P	171150		0.87-1.18 [22-30]		3/4"					13	58
16P	171170		1.18 - 1.38 [30 - 35]		1"			7	31	7	31
8P4I	N/A	2	0.71-0.87 [18-22]		1/2"		1/4"-20 [6]	25	111	15	67
12P4I	N/A		0.87-1.18 [22-30]		3/4"					13	58
16P4I	N/A		1.18 - 1.38 [30 - 35]	N/A	1"			7	31	7	31
8P4IN	175290	3	0.71-0.87 [18-22]		1/2"	3/36" - 9/64" [2 - 3]		N/A	N/A		
8P24IN	175300					1/8" - 1/4" [3 - 8]				15	67
8P58IN	175310					5/16" - 1/2" [8 - 14]					
12P4IN	175320		0.87-1.18 [22-30]		3/4"	3/36" - 9/64" [2 - 3]				13	58
16P4IN	175330		1.18 - 1.38 [30 - 35]		1"					7	31
8P8P	171220	4	0.71-0.87 [18-22]	0.71-0.87 [18-22]	1/2", 1/2"	- N/A		25	31		
8P12P	171230			0.87-1.18 [22-30]	1/2", 3/4"						
8P16P	171240			1.18 - 1.38 [30 - 35]	1/2", 1"			7		N/A	N/A
12P12P	171250		0.87-1.18 [22-30]	0.87-1.18 [22-30]	3/4", 3/4"			25	111	','	'',
12P16P	171260			1.18 - 1.38 [30 - 35]	3/4", 1"			7	31		
16P16	171270		1.18 - 1.38 [30 - 35]	1.18 - 1.38 [30 - 35]	1", 1"						

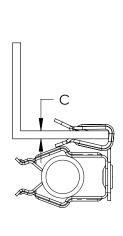

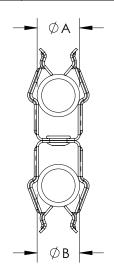

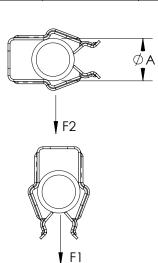

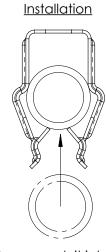

Snap conduit into clip.

- WARNING:

 1. NVent products shall be installed and used only as indicated in NVent product instruction sheets and training materials. Instruction sheets are available at www.nvent.com and from your nVent customer service representative.

 2. NVent products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.

 3. All instructions must be completely followed to ensure proper and safe installation and performance.

 4. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and/or death, and void your warranty.

 5. Products that are manufactured using spring steel components shall be used only in a non-corrosive indoor environment.

 6. All pipe supports, hangers, intermediate components and structural attachments must ONLY be used as described herein and are NEVER to be used for any other purpose.

NOTE: All load ratings are for static conditions and do not account for dynamic loading such as wind, water or seismic loads, unless otherwise noted.

The customer is responsible for:

- a. Conformance to all governing codes.
 b. The integrity of structures to which the products are attached, including their capability of safely accepting the loads imposed, as evaluated by a qualified
- engineer.

 c. Using appropriate industry standard hardware as noted above.

SAFETY INSTRUCTIONS:

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.



