

Instruction sheet for BD-100-125A & TD-100-125A series (563800 / 563810 / 563820 / 563830 / 563840)


BD Two Pole Distribution Block, 100/125A BD-100-125A (563800)

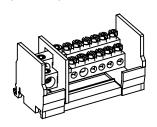


BD Two Pole Distribution Block, 100/125AL BD-100-125AL (563810)

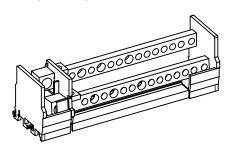


TD Four Pole Distribution Block, 100/125A

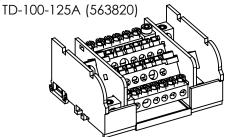


TD Four Pole Distribution Block, 100/125AL TD-100-125AL (563830)

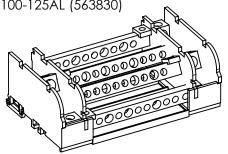

 TD Four Pole Distribution Block, 100/125ALL

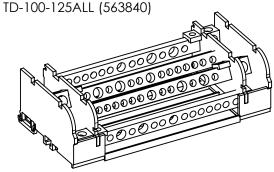



			563800	563810	563820	563830	563840	Hole Ø	Ŏ
⇒	10 - 35mm²	10 - 35mm²	x1	x1	x1	x1	x1	9,5mm	6 - 7 N.m
⇔	2,5 - 6mm²	1,5 - 6mm²	x5	x11	х5	x7	x11	5,5mm	2 - 3 N.m
⇔	10 - 25mm²	6 - 16mm²	x1	х3	x1	x3	x1	7,5mm	2 - 3 N.m
⇔	10 - 35mm²	10 - 25mm²	-	-	-	-	x2	8,5mm	2 - 3 N.m

Note:

1. Tighten screws of unused galleries to torque of 0,5 - 1 N.m

- damage, serious bodily injury and/or death, and void your warranty.

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

nVent, CADDY, ERICO CADWELD, ERICO CRITEC, ERICO, ERIFLEX, and LENTON are owned by nVent or its global affiliates. All other trademarks are the property of their respective owners. nVent reserves the right to change specifications without prior notice.



