

# UAV01

Air vents



These air vents allow air to be circulated inside the enclosure, minimising the risk for water condensation, while maintaining the IP 44 protection degree.

---

**Item no.** UAV01

---

**Description:** Two air vents must be mounted per enclosure to ensure sufficient air circulation and prevent water condensation. Air vents are preferably mounted in the upper and lower part of the enclosure. Degree protection: IP 44.

**Material:** Polyamide.

**Delivery:** Set of 2 pieces with mounting accessories.