
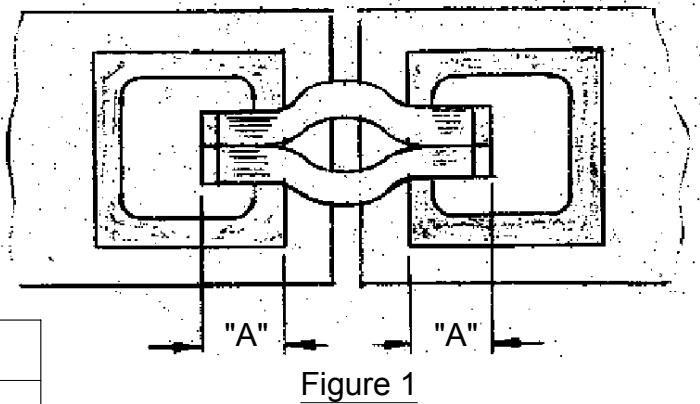
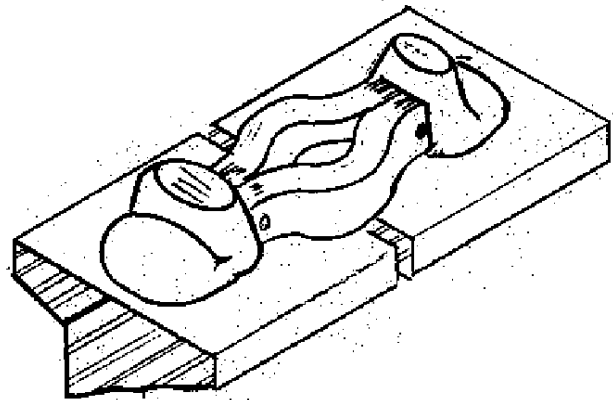


# Cable to Rail

## Horizontal Tap to Head

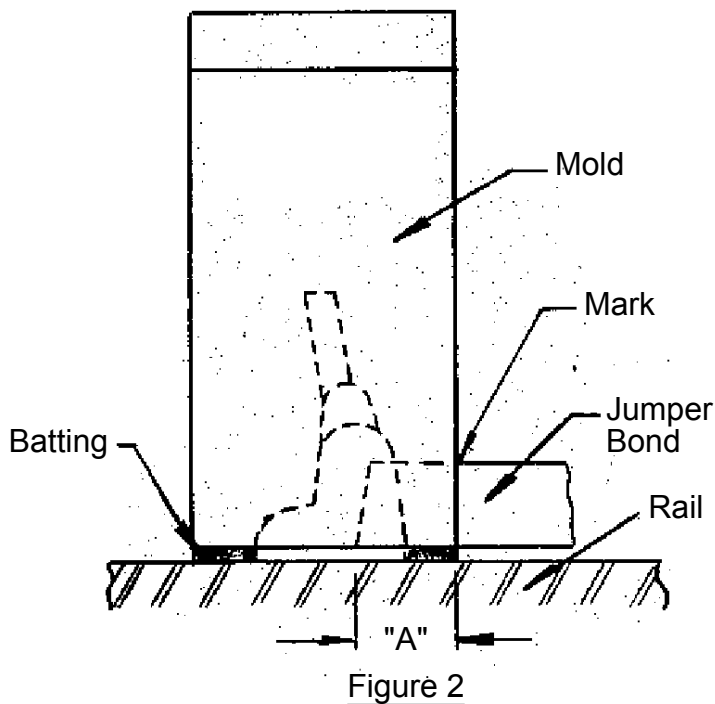

Mold Number	Jumper	"A"
PB99HW001M	1000 KCM	1.5" [30 mm]
PB99HW002M	1600 KCM	1.6" [30 mm]
PB99HW003M	2000 KCM	1.6" [41 mm]

Prior to making a connection, read and follow the full instruction sheet IPRNLBR, the full instruction sheet IPP, the full instruction sheet shipped with ERICO® CADWELD® (IPX) and special instructions below.

1. Mark jumper from end to be welded (See "A" dimension in table above).
2. Position batting and jumper bond on rail (As shown in Figure 1).
3. Position mold on jumper with mark on jumper even with side of mold (As shown in Figure 2).
4. Secure to rail using clamping fixture (ERICO part number PBB472).

#### WARNING:

1. ERICO products shall be installed and used only as indicated in ERICO product instruction sheets and training materials. Instruction sheets are available at [www.erico.com](http://www.erico.com) and from your ERICO customer service representative.
2. ERICO products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.
3. All instructions must be completely followed to ensure proper and safe installation and performance.
4. Improper installation, misuse, misapplication or other failure to completely follow ERICO's instructions and warnings may cause product malfunction, property damage, serious bodily injury and death.

#### SAFETY INSTRUCTIONS:

All governing codes and regulations and those required by the job site must be observed. Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

CADDY, CADWELD, CRITEC, ERICO, ERIFLEX, ERITECH, and LENTON are registered trademarks of ERICO International Corporation.