
Type TP

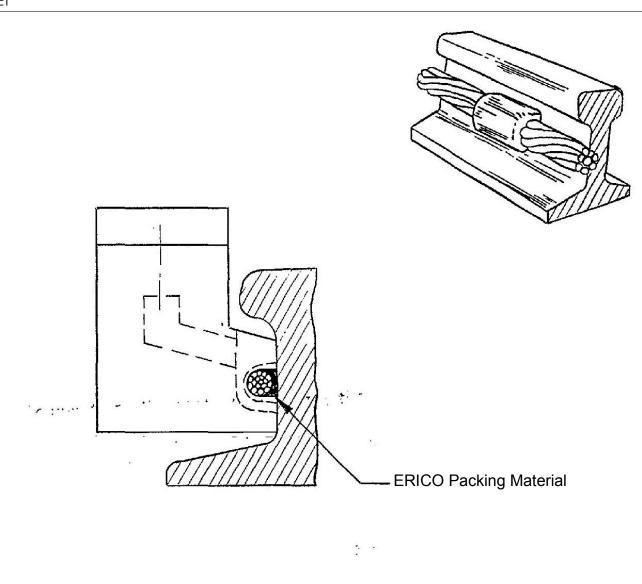

Prior to making a connection, read and follow the full instruction sheet IPRLBR, the full instruction sheet IPG, the full instruction sheet shipped with CADWELD® (IPX), and special instructions below.

- 1. Do not cut cable.
- 2. Place mold on cable and rail with mold positioned firmly against web of rail.
- 3. Secure mold to rail with "C" clamp.
- 4. Pack around cable openings with packing material.

- WARNING:
 1. ERICO products shall be installed and used only as indicated in ERICO product instruction sheets and training materials. Instruction sheets are available at www.erico.com and from your ERICO customer service representative.
 2. ERICO products must never be used for a purpose other than the purpose for which they were designed or in a manner that exceeds specified load ratings.
 3. All instructions must be completely followed to ensure proper and safe installation and performance.
 4. Improper installation, misuse, misapplication or other failure to completely follow ERICO's instructions and warnings may cause product malfunction, properly damage, serious bodily injury and death.

All governing codes and regulations and those required by the job site must be observed.

Always use appropriate safety equipment such as eye protection, hard hat, and gloves as appropriate to the application.

1 OF 1

CADDY, CADWELD, CRITEC, ERICO, ERIFLEX, ERITECH, and LENTON are registered trademarks of ERICO International Corporation.

